

# Smart Dupline® Weather Station Type SHOWEAGPS

CARLO GAVAZZI



- Brightness measurement with three separate sensors for east, south and west. Recognition of twilight/dawn with special filters
- Wind measurement: the wind strength measurement takes place electronically and thus noiselessly and reliably, even during hail, snow and sub-zero temperatures. Even turbulent air and anabatic winds in the vicinity of the weather station are recorded
- Temperature measurement
- Heated precipitation sensor (1.2 watts): no false reports as a result of fog or dew. Dries quickly after precipitation has stopped
- Integrated GPS receiver. Position (degree of longitude and latitude) and position of the sun (azimuth, elevation)

## Product Description

The SHOWEAGPS Weather Station measures temperature, wind speed and brightness (eastern, southern and western sun) and recognizes precipitation. The direction of the sun

(azimuth) as well as its height (elevation) are calculated and indicated, too. Data are usually output after a request made by the Modbus master via a 2-wire RS485 connection.

## Ordering Key

**SH O WEA GPS**

smart-house \_\_\_\_\_  
Outdoor \_\_\_\_\_  
Weather station \_\_\_\_\_  
GPS receiver \_\_\_\_\_

## Type Selection

Mounting	Colour	12 to 40 VDC (12 to 28 VAC)
On wall	White	SHOWEAGPS

## Input Specifications

<b>Temperature</b> Heating rain sensor Measurement range Resolution Accuracy	Approx. 1.2 W -40 to +80°C 0.1°C ±1.5°C at -25 to +80°C	<b>Brightness</b> Measurement range Resolution	0 to 99 000 lux 1 lux at 0 to 120 lux 2 lux at 121 to 1 046 lux 63 lux at 1 047 to 52 363 lux 423 lux at 52 364 to 99 000 lux ±35%
<b>Wind</b> Measurement range Resolution Accuracy	0 to 35 m/s 0.1 m/s At ambient temperature -20 to +50°C: ±22% of the measurement value when incident flow is from 45 to 315° ±15% of the measurement value when incident flow is from 90 to 270° (Frontal incident flow corresponds to 180°)	Accuracy	

## Bus Specifications

Data output	RS485 2-wire
Protocol	Modbus RTU

## Supply Specifications


Operating voltage	12 to 40 V DC (12 to 28 V AC)
Current	Max. 80 mA, residual ripple 10%



## General Specifications


<b>Environment</b>		<b>Housing</b>	
Degree of protection	IP 44	Dimensions (W × H × D)	approx. 96 × 77 × 118 mm
Operating temperature	-30° to +50°C (-22° to 122°F)	Material	Plastic
Storage temperature	-30° to +70°C (-22° to 158°F)	Colour	White / translucent
Humidity (non-condensing)	5 to 95% RH	<b>Weight</b>	Approx. 160 g
<b>Connection</b>		<b>CE Marking</b>	Yes
Cable cross-section	Massive conductors of up to 0.8 mm <sup>2</sup>	<b>EMC</b>	EN 60730-1:2000-11 + A11:2002

## Wiring Diagram

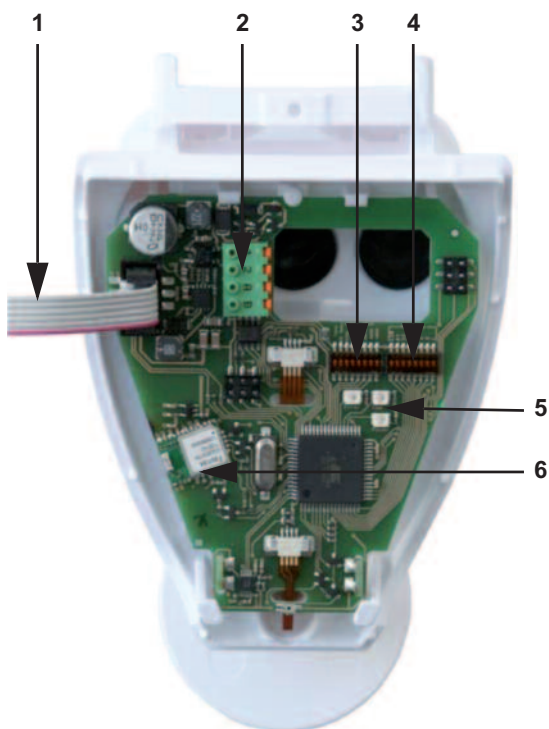

- 1) Connection to the rain sensor in the housing cover
- 2) Connecting plug, suitable for massive conductors of up to 0.8 mm<sup>2</sup>  
V+ : 24VDC;  
V- : GND;  
B+ : RS485+;  
A- : RS485-
- 3) DIP switch for interface parameters (see detailed view)
- 4) DIP switch for slave address (see detailed view)
- 5) LED "Com", "Error" and "Power"  
„Power“: operating voltage  
„Error“: sensor error or erroneous data  
„Com“: bus communication
- 6) GPS module

## Serial Port Programming

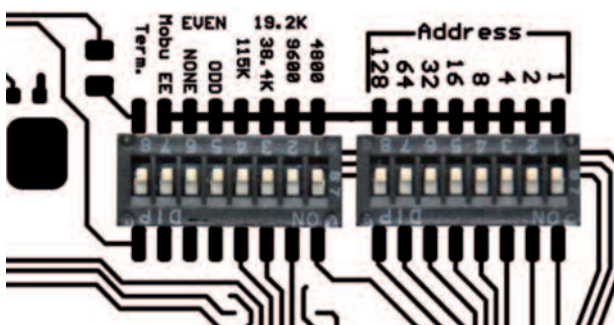

If all DIP switches are in the OFF position (default setting), the following parameters are active:

Address: 1  
Baud rate: 19,200  
Parity: Even  
Termination: Disabled

### Setting of the slave's address:

The slave address is set with the help of the 8-bit DIP switch "Address". If all switches are in the OFF position, Address 1 is active. Address 0 is reserved for broadcast messages; addresses greater than 247 are not valid.

The coding of the address is binary. For the address 47, you must e.g. set the switches 1, 2, 3, 4 and 6 to ON.

### Interface parameters:

The interface parameters are set with the help of the second 8-bit DIP switch. If the first 4 switches are in the OFF position, the transfer rate amounts to 19,200 bauds. If one of these switches is set to ON, the corresponding baud rate is applicable.

**Parity:** If the two switches "ODD" and "NONE" are set to OFF, the parity is EVEN. Only "ODD" or "NONE" activates the corresponding parity control.

**Switch "Mobu EE":** no function.

**Switch "Term.":** bus termination 124 ohms